

Technical Bulletin for CF-SPARKER

What if my push button crystal fire sparker is not working? What can be done to fix it?

1. Remove the sparker from the table by unscrewing the push bottom top and hex nut (if applicable) and disconnecting the wires on the backside of the sparker.
2. Next, place a fresh battery in the sparker making sure it is installed with the (+) Positive side facing out.
3. Screw the push button top back onto the sparker allowing the metal spring to make contact with the battery.




*If you find any corrosion on the contact points, try cleaning first with some vinegar on a Q-Tip.

Works Best

4. With your fingers on the sides of the sparker, depress the push button then look and listen for a spark on the back side of the sparker. You should hear a ticking sound.
5. Finally, once your sparker is working you can reinstall it onto the table. Check the wires running from the sparker to the electrode, make sure the male connection on the sparker is fitting into the female connection on the wires. Try cleaning off the ends/tips of these and have them firmly plugged into the back of the sparker.

If you do not see results, call OGC and ask for technical help, 952-658-6730

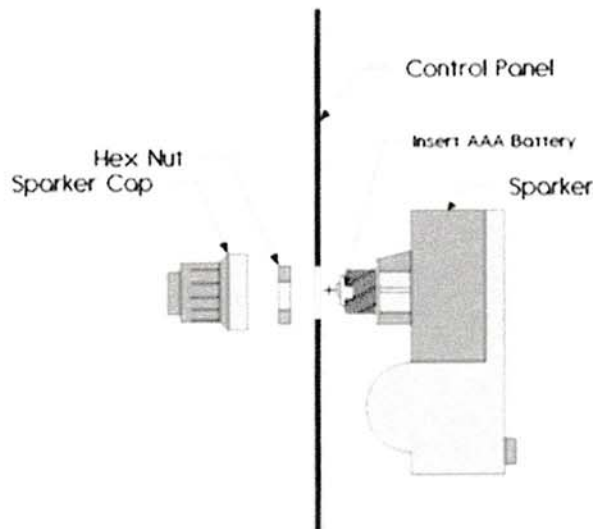

THE OUTDOOR
GREATROOM
COMPANY

sales@outdoorrooms.com | 1.866.303.4028 | outdoorrooms.com